

SJ100 SERIES

Inverter



Technical Data

Compact Inverter with Vector Control

- Capacity range: 0.2 – 7.5 kW
- Compact size
- Modular design for versatile applications
- Global standards to CE, UL, c-UL, cTick and CSA
- Internal RS422 interface
- Internal brake chopper
- Sensorless Vector Control (SLV)
- Motor autotuning
- 200% starting torque
- Motor potentiometer
- PID-Control
- Automatic voltage regulation
- Motor thermistor input
- Digital display with potentiometer




Specifications

		200V-Series							400V-Series							
Inverter SJ100		002 NFE	004 NFE	005 NFE	007 NFE	011 NFE	015 NFE	022 NFE	004 HFE	007 HFE	015 HFE	022 HFE	030 HFE	040 HFE	055 HFE	075 HFE
Protective structure																IP20
Maximum motor size (4P) in kW		0.2	0.4	0.55	0.75	1.1	1.5	2.2	0.4	0.75	1.5	2.2	3.0	4.0	5.5	7.5
Input supply phase		Single / Three phase							Three phase							
Rated input voltage		200VAC -10% ~ 240VAC +5% 50/60Hz +/-5%							380VAC -10% ~ 460VAC +10% 50/60Hz +/-5%							
Rated output voltage		Three phase 200 ~ 240VAC (Corresponds to input voltage)							Three phase 380 ~ 460VAC (Corresponds to input voltage)							
Rated output current in A		1.4	2.6	3.0	4.0	5.0	8.0	11.0	1.5	2.5	3.8	5.5	7.8	8.6	13.0	16.0
Output frequency range		0.5 ~ 360 Hz														
Frequency accuracy (at 25°C +/-10°C)		Digital command: +/-0.01% of maximum frequency Analogue command: +/-0.1% of maximum frequency														
Frequency setting resolution		Digital setting: 0.1 Hz Analogue setting: max. frequency / 1000														
Voltage/frequency characteristic		Constant, reduced or high starting (SLV) torque														
Overload current capacity		150% during 60 seconds (once per 10 minutes)														
Acceleration/deceleration time		0.1 ~ 3000 s in selectable linear and non-linear mode (second acceleration/deceleration usable)														
Starting torque (using SLV)		> 200%							> 180%							
Braking torque	Dynamic braking, feedback to capacitor	approx. 100%	approx. 70%	appr. 20%	approx. 100%	appr. 70%	approx. 20%	approx. 30%								
	External braking resistor	approx. 150%	approx. 100%	approx. 150%	approx. 100%	approx. 100%	approx. 100%	approx. 80%								
	DC injection braking	Braking is on at the minimum frequency or less (minimum frequency, braking time and braking force can be set)														
Inputs	Frequency setting	Digital operator	Settings using keys or potentiometer													
	External signals	0-10VDC (input impedance 10k Ohm); 4-20mA (input impedance 250 Ohm); Potentiometer 1k-2k Ohm, 1W (055 ~ 075LFU/LFR: 2W)														
	Forward / Reverse run	Digital operator	Via keys RUN (for start) and STOP/RESET (for stop) (Default setting: forward run)							Intelligent input terminals configurable as FW and RV						
Outputs	Intelligent input terminals programmable as		FW: Forward run start/stop RV: Reverse run start/stop CF1-CF4: Multistage speed JG: Jogging command AT: Analogue current input selection 2CH: 2nd Accel./decel. time FRS: Free run stop EXT: External trip USP: USP function RS: Reset SFT: Software lock PTC: Thermal protection DB: Ext. DB input SET: 2nd setting active UP: Acceleration (Remote) DWN: Decelerate (Remote)													
	Intelligent output terminals programmable as		FA1/FA2: Frequency arrival signal RUN: Motor running signal OL: Overload signal OD: Deviation signal at PID control AL: Alarm signal													
	Frequency and current monitoring		Connection of external analogue meter (0-10VDC, max. 1mA) for frequency or current; connection of external digital frequency meter													
Environmental	Fault alarm contact	On when the inverter trips (1c contact). Alternatively usable as intelligent output terminal														
	Other functions	Autotuning, Automatic voltage regulation, retry; analogue gain/bias adjustment, frequency jump, upper/lower limiter, output frequency display, trip history monitoring, carrier frequency setting, PID control, automatic torque boost, USP function, 2nd Setting function, ON/OFF control of cooling fan														
	Protection functions	Overcurrent, overvoltage, undervoltage, electronic thermal, temperature abnormality, ground fault, overload, CT error, BRD error														
Options	Ambient temperature	-10 ~ 50°C; > 40°C Current derating														
	Storage temperature and humidity	-25 ~ 70°C (during short term transportation period only) 20 ~ 90% RH (no dew condensation)														
Options		Remote operator, copy unit, cable for digital operator, reactor for improving power factor, noise filter, OPE-J														
Overall weight (approx.) in kg		0.7	0.8	1.3	2.3	2.8	1.3	1.7	2.8	5.5	5.7					

SJ100 Series Dimensions

Type SJ100	002 NFE	004 HFE	007 HFE	015 NFE	022 NFE	055 HFE
Width mm	84	114	114	140	140	182
Height mm	130	130	130	180	180	257
Depth mm	100*/114	136	163	160	171	177

*for 002 NFE

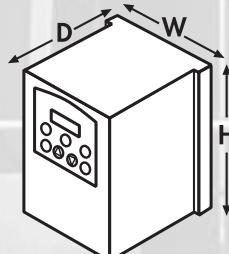

Local contact:

www.hitachi-ds.com

Hitachi Europe GmbH

Am Seestern 18 · D-40547 Düsseldorf

Tel. +49-211-52 83 -0 · Fax +49-211-52 83 -649

eMail: info-dus.inv@hitachi-eu.com